


ASSEMBLY INSTRUCTIONS

Option 1: Canopy Mounted Driver

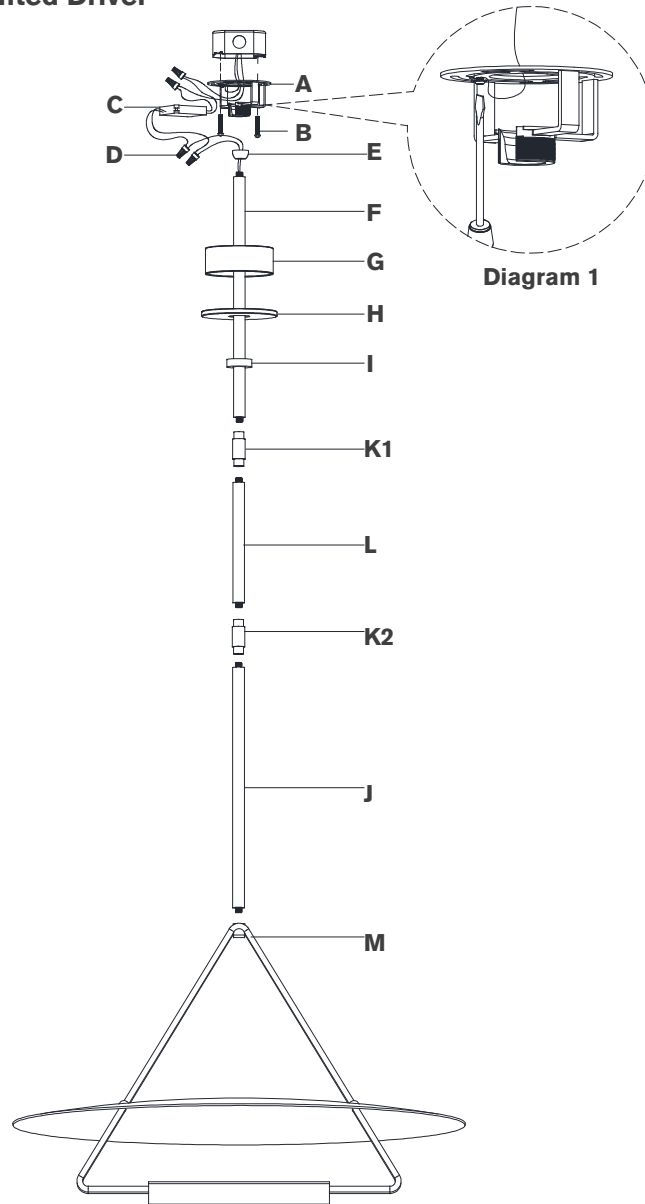

Teline 30" Round Chandelier

Item # KW5105

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver

Slotted Screwdriver


Wire Cutters

Wire Strippers

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove short mounting plate (**N**) from canopy (**H**) by removing collar ring (**I**).
NOTE: Short mounting plate (**N**) will not be used for canopy mounted assembly. Keep part and store for future use.
3. Install tall mounting plate (**A**) (Located inside yellow hardware bag) to junction box and secure with mounting screws (**B**).
4. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 1). Tighten.
5. Feed fixture wires through rod (**J**), then connect to fixture (**M**) and secure with coupling (**K2**). Repeat for rod (**L**), connecting to coupling (**K2**) and secure with coupling (**K1**).
6. Continue feeding fixture wires through rod (**F**), collar ring (**I**), canopy (**H**) and driver housing (**G**).
7. Holding fixture upright, slide collar ring (**I**), canopy (**H**) and driver housing (**G**) down rods and rest on top of fixture (**P**). Then connect rod (**F**) to coupling (**K1**), securing with swivel ball (**E**).
NOTE: Slide components down slowly to avoid damages.
8. Hang fixture swivel ball (**E**) to center of mounting plate (**B**).
9. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires, and strip insulation on each 5/8".
10. Connect fixture neutral wire (black) to the driver (**C**) output neutral wire (black) using wire nut (**D**).

ASSEMBLY INSTRUCTIONS

Option 1: Canopy Mounted Driver

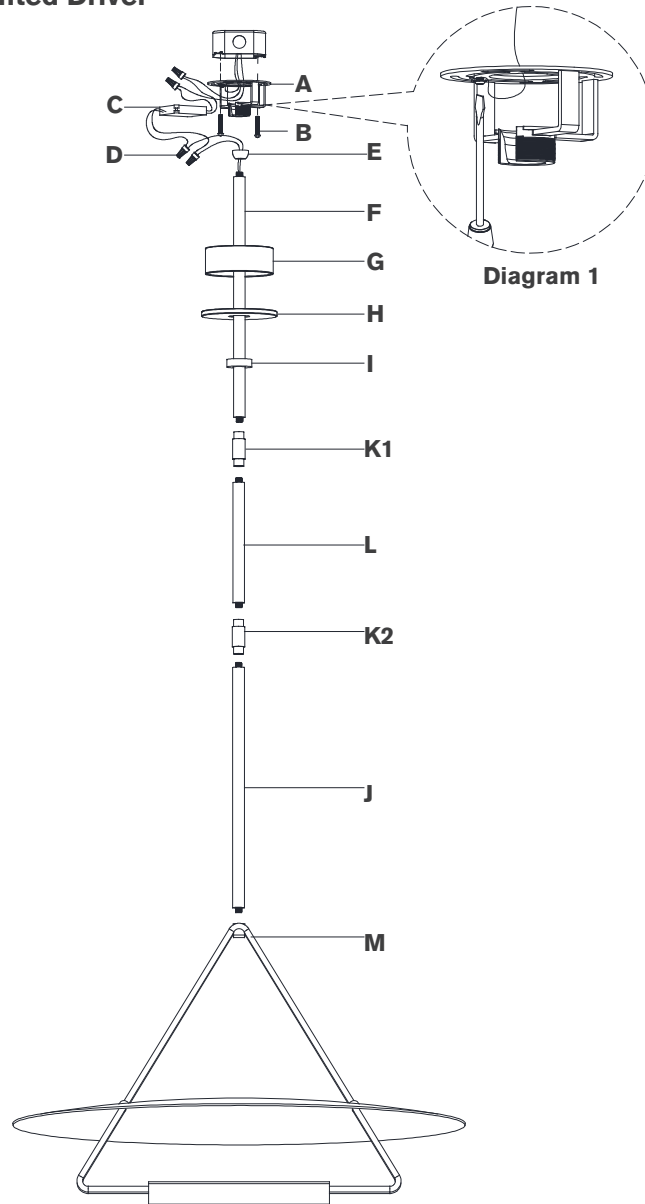

Teline 30" Round Chandelier

Item # KW5105

NOTICE:


This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

11. Connect fixture hot wire (red) to the driver **(C)** output hot wire (red) using wire nut **(N)**.
 12. Connect driver **(C)** input neutral wire (white) to the supply neutral wire (usually white) using wire nut **(D)**.
 13. Connect driver **(C)** input hot wire (black) to the supply hot wire (usually black) using wire nut **(D)**.
- CAUTION:** Do not reverse the hot and neutral connections.
14. Make sure all wire connections are tight, then carefully tuck into the junction box.
 15. Insert driver **(C)** into mounting plate bracket.
 16. Install driver housing **(G)**, canopy **(H)** to mounting plate **(A)** and secure with collar ring **(I)**.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.

ASSEMBLY INSTRUCTIONS

Option 2: Ceiling Mounted Driver

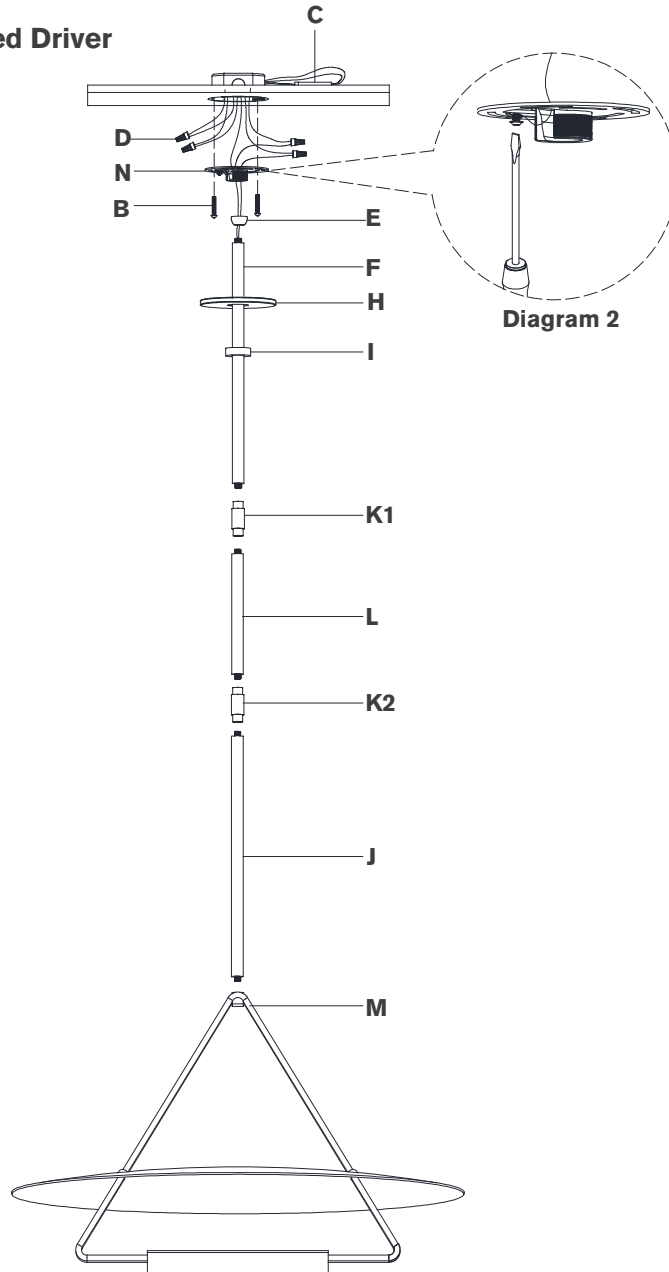

Teline 30" Round Chandelier

Item # KW5105

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver

Slotted Screwdriver

Wire Cutters

Wire Strippers

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Place driver **(C)** into ceiling and route all wires through one of the knockouts in the junction box.
3. Remove short mounting plate **(N)** from canopy **(H)** by removing collar ring **(I)**.
4. Install short mounting plate **(N)** to junction box and secure with mounting screws **(B)**.
5. Connect supply ground wire (usually green or bare copper) around the green grounding screw (see diagram 2). Tighten.
6. Feed fixture wires through rod **(J)**, then connect to fixture **(M)** and secure with coupling **(K2)**. Repeat for rod **(L)**, connecting to coupling **(K2)** and secure with coupling **(K1)**.
7. Continue feeding fixture wires through rod **(F)**, collar ring **(I)** and canopy **(H)**.
8. Holding fixture upright, slide collar ring **(I)** and canopy **(H)** down rods and rest on top of fixture **(P)**. Then connect rod **(F)** to coupling **(K1)**, securing with swivel ball **(E)**.
NOTE: Slide components down slowly to avoid damages.
9. Hang fixture swivel ball **(E)** to center of mounting plate **(B)**.
10. Cut excess wires, being sure to leave enough to reach the junction box. Separate wires, and strip insulation on each 5/8".
11. Connect fixture neutral wire (black) to the driver **(C)** output neutral wire (black) using wire nut **(D)**.

